




SSE Spa Electrics®

LiTYARD®

Outdoor Lighting System

OUTDOOR LIGHTING SYSTEM MANUAL

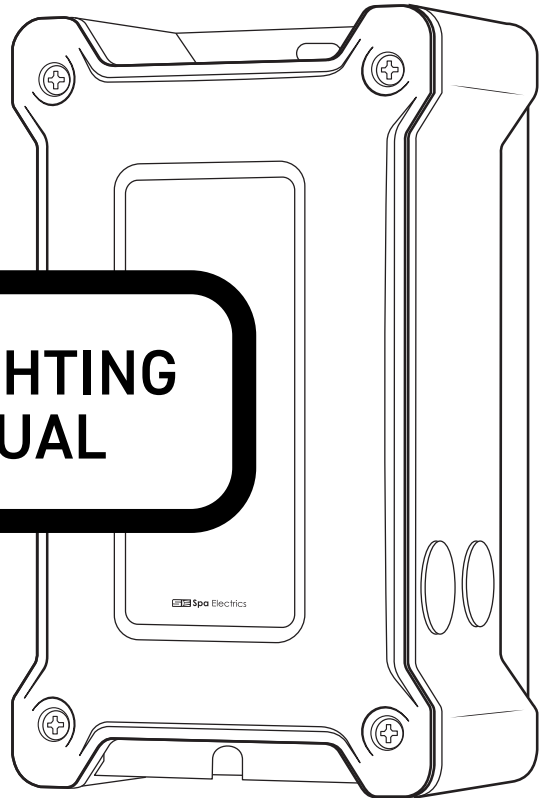

LiTYARD

INSTALLATION & OWNER'S MANUAL

CONTENTS

BEFORE YOU START	2
READ THIS FIRST	3
WHAT'S INCLUDED	4
WIRING THE CONTROLLER	5
MOUNTING THE CONTROLLER	9
RF BRIDGE INSTALLATION	10
WIRING EXAMPLES	13
QUICK SETUP PROCESS	16
LiT YARD RF BRIDGE LED STATUS	17
HANDSET PAIRING	17
REMOTE HANDSET OPERATION	18
TROUBLE SHOOTING - REMOTE HANDSET	18
FCC / ISED COMPLIANCE STATEMENT	19
SPECIFICATIONS	16

BEFORE YOU START

Light requirements

Ensure all of your lights are LiT YARD compatible before installation.

The LiT YARD system is compatible with Spa Electrics **MULTI PLUS** lights.

The LiT YARD system is not compatible with multi-color products or alternative lighting brands.

READ THIS FIRST

Read and follow the safety instructions listed below and other basic safety precautions before installation or operation of this transformer and other associated equipment.

This power unit is specifically designed to supply 12V AC to landscape, fountain, swimming pool and spa luminaires.

Installation must comply with provisions of the National Electrical Code, ANSI/NFPA 70, including those in Article 680 – Swimming Pools, Spas, Fountains and Water Features. Or the Canadian Electrical Code (CEC) CSA 22.1 as applicable, and all the local codes and ordinances.

CAUTION: for use only on a branch circuit protected by a Class A type ground fault circuit interrupter.

Power supplies are for outdoor use only. Not for use with an extension cord.

WARNING



If the installation requires running wire through building structure, special wiring methods are needed.

Do not submerge.

Do not exceed the maximum ratings of individual components, wiring devices and current carrying capacity of conductors.


PRODUCT SUPPORT AND INFORMATION

VISIT: WWW.SPAELECTRICS.COM


WHAT'S INCLUDED




LIT YARD 2
Controller

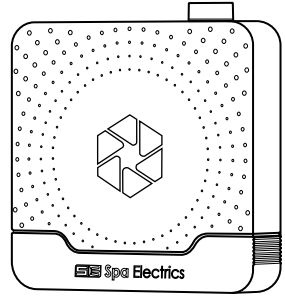

LIT YARD RF Bridge

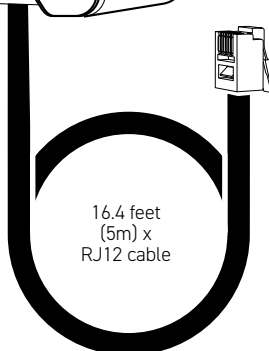


16.4 feet
(5m) x
RJ12 cable

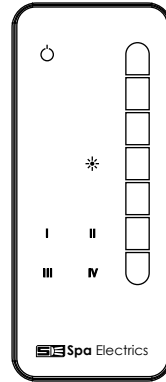


Remote Handset



x 2 'AAA'
Batteries

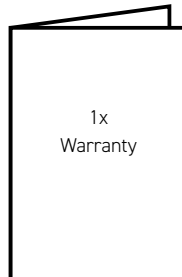

1x
Warranty

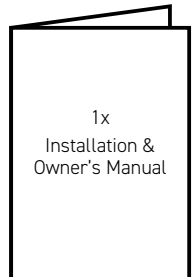

1x
Installation &
Owner's Manual

WIRING THE CONTROLLER

RISK OF FIRE OR ELECTRIC SHOCK, DISCONNECT ELECTRIC POWER BEFORE SERVICING.





- IF INSTALLATION INVOLVES RUNNING WIRING THROUGH A STRUCTURE, SPECIAL WIRING METHODS ARE NEEDED.
- DO NOT CONNECT TWO OR MORE TRANSFORMERS/POWER SUPPLIES IN PARALLEL.

1 REMOVE THE LID

Open the LiT YARD 2 Controller to access wiring for 120V Input and 12/13V Output.


Remove the 4x Phillips Head screws to lift the lid off.

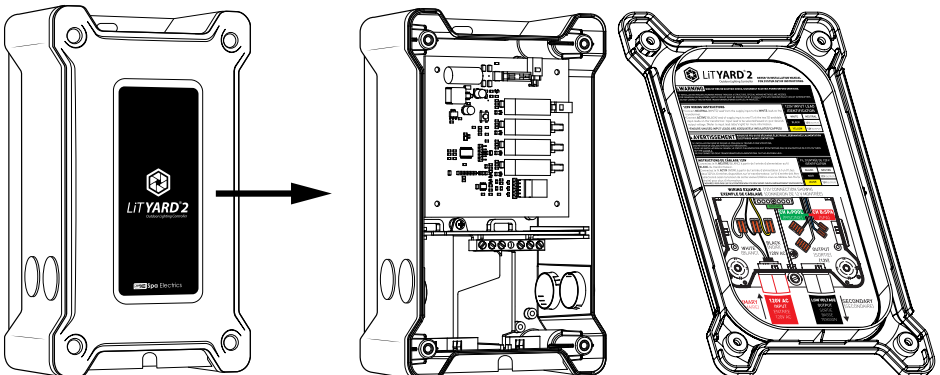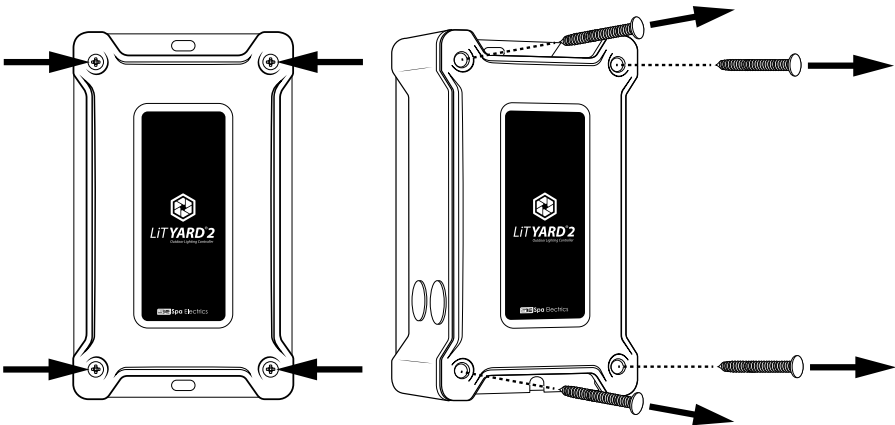

WIRING THE CONTROLLER ...CONTINUED

2 120V MAINS NEUTRAL CONNECTION

Connect the 'White' Neutral wire from the branch wire to the 'White' input lead of the transformer.

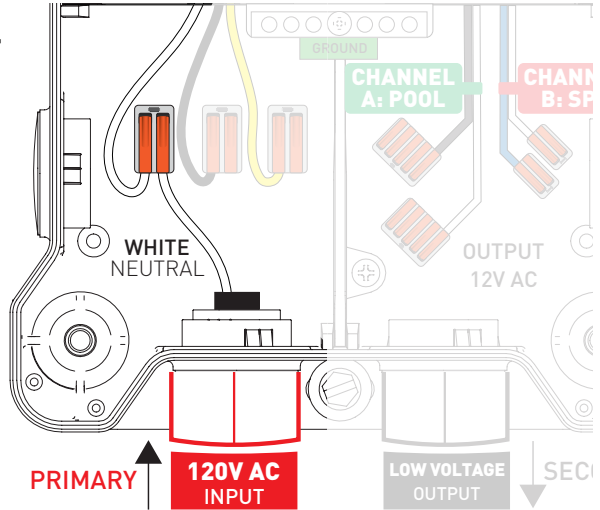


3 120V MAINS ACTIVE CONNECTION


IMPORTANT

The LiT YARD 2 Controller can be configured to output either 12V AC OR 13.5V AC

Connect the 'Black' 120V Active (Hot) wire to ONE (1) of the Active Input Leads:

 Black Input Lead = 12V Output

 Yellow Input Lead = 13.5V Output

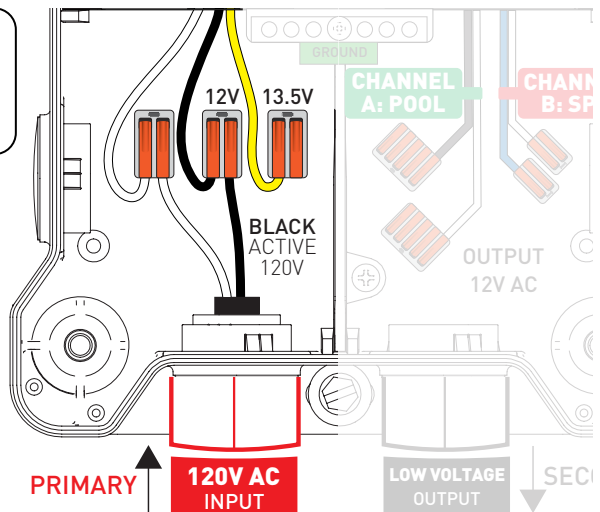

12V CONFIGURATION SHOWN

WIRING THE CONTROLLER ...CONTINUED

NOTE



Ensure the unused input lead remains adequately insulated (capped).

DO NOT CONNECT UNUSED ACTIVE INPUT TO GROUND.


4 GROUNDING CONNECTION

IMPORTANT

The LiT YARD 2 Controller does NOT require grounding. A grounding bar is provided in branch wired configurations for convenience only.

Connect ground wire from supply input to grounding bar.

Use remaining positions to connect any additional ground wires. Ensuring no wiring passes between primary and secondary compartments.

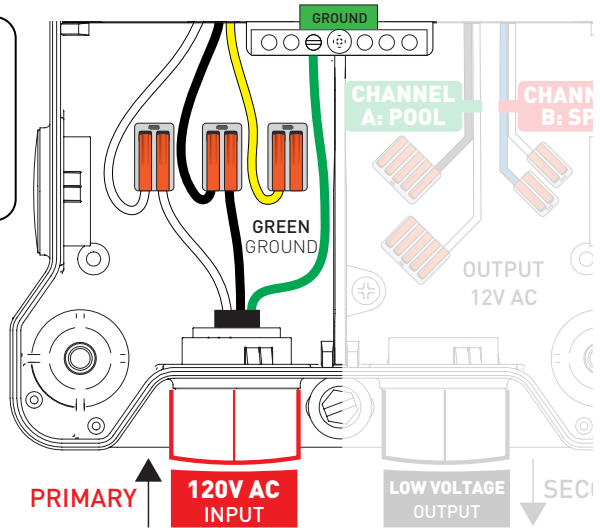

WIRING THE CONTROLLER ...CONTINUED


5 CONNECTING LIGHTS

Connect Spa Electrics Multi Plus lights on the Low Voltage Output (Secondary) side of the transformer.

There are two (2) separate channels that Lights can be connected to. These channels can be controlled independently in the app as 'Zones'.

In a typical pool & spa layout, it is common to connect the lights in the pool to Channel A. Then connect the Spa light to Channel B.

In the example below, one (1) pool light has been connected to Channel A and one (1) spa light has been connected to channel B

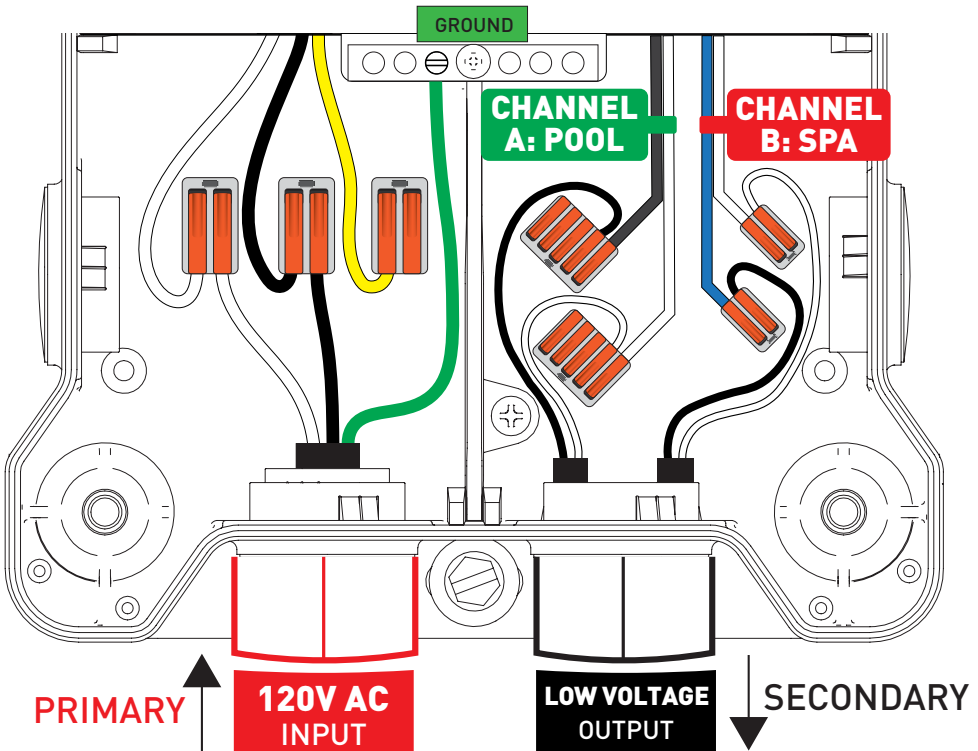


ENSURE THE LID OF THE CONTROLLER IS CLOSED AND SECURED WITH THE SAME 4x PHILLIPS HEAD SCREWS ONCE WIRING IS COMPLETE.

MOUNTING THE CONTROLLER

POSITIONING

ENSURE THE LiT YARD 2 OUTDOOR LIGHTING CONTROLLER IS WALL MOUNTED AT LEAST 20" (500MM) ABOVE GROUND AND IN A SERVICEABLE LOCATION.

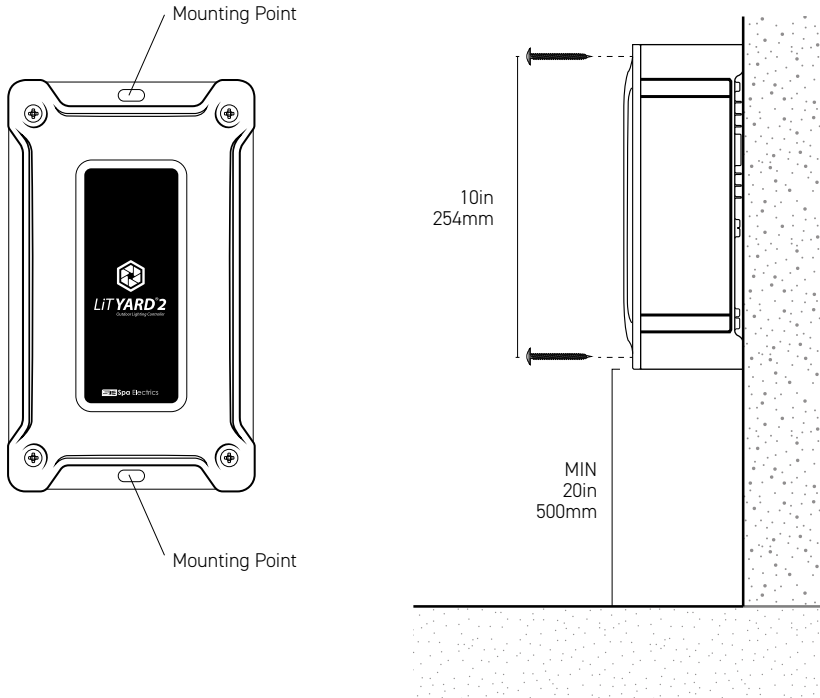

SCREW KIT INCLUDED FOR LiT YARD 2



NOTE



This product has been designed for use with PVC/Flexible conduit, it is not intended to be used with metallic conduit. Connections/hubs need to be UL Listed, weather/rain-tight and suitable for the application. All conduits should be adequately supported to prevent excessive stress on the enclosure.


RF BRIDGE INSTALLATION

POSITIONING

WHEN FINDING A LOCATION TO MOUNT THE LIT YARD 2 RF BRIDGE, THERE ARE SOME FACTORS THAT WILL IMPROVE THE CONNECTIVITY OF YOUR RF BRIDGE TO YOUR REMOTE HANDSET.

THE RF BRIDGE SHOULD BE MOUNTED:

- IN AN ELEVATED POSITION.
- OUTSIDE OF ENCLOSURES.
- EG. PUMP HOUSES OR GARDEN SHEDS.

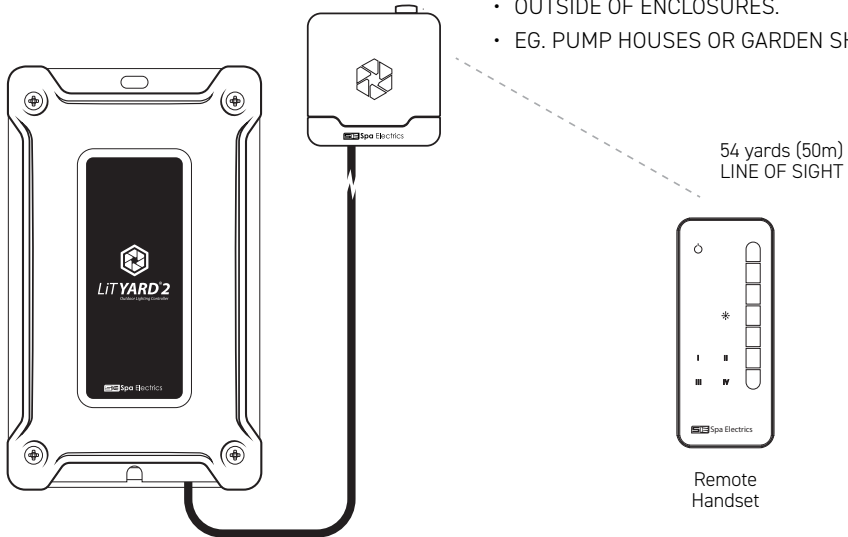

MINIMIZING THE NUMBER OF OBSTRUCTIONS BETWEEN THE RF BRIDGE AND THE REMOTE HANDSET WILL IMPROVE THE CONNECTIVITY BETWEEN THE DEVICES. MATERIALS SUCH AS TIN, STEEL AND CONCRETE CAN HAVE A DETRIMENTAL AFFECT ON THE RF BRIDGE SIGNAL TO THE REMOTE HANDSET.

THE REMOTE HANDSET SHOULD BE WITHIN A 54 YARD (50M) LINE OF SIGHT OF THE RF BRIDGE.


1 INSTALLING THE KEYHOLE SCREW

THE RF BRIDGE USES A KEYHOLE HOOK ARRANGEMENT FOR MOUNTING. FASTEN THE SCREW INTO THE WALL MATERIAL UNTIL THE SCREW HAS 1/4-1/2 INCHES (7-11MM) STILL EXPOSED FROM THE WALL.



RF BRIDGE INSTALLATION


2 ATTACHING RF BRIDGE TO KEY HOLE SCREW

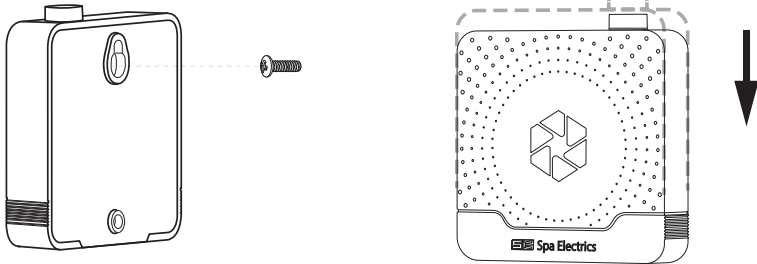

1: SLIDE THE RF BRIDGE OVER THE MOUNTING SCREW USING THE KEYHOLE ON THE REAR OF THE UNIT.

2: LOWER THE RF BRIDGE OVER THE MOUNTING SCREW TO ENGAGE THE LOCKING PORTION OF THE KEYHOLE.

3 INSTALLING THE LOWER MOUNTING SCREW

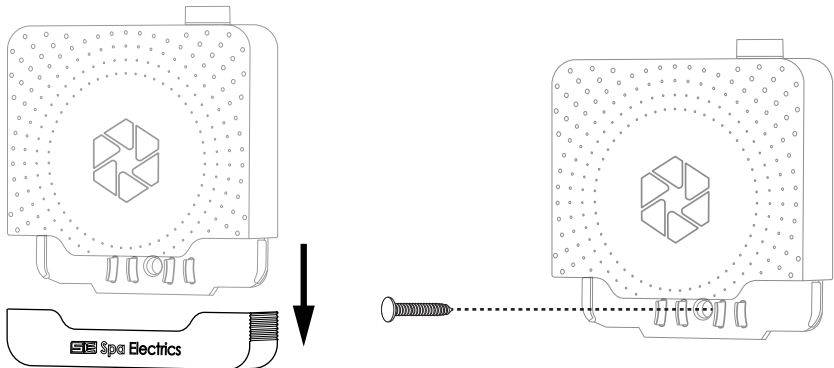

1: REMOVE THE LOWER COVER ON THE RF BRIDGE TO EXPOSE THE LOWER MOUNTING HOLE.

2: FASTEN A SCREW THROUGH THE LOWER MOUNTING HOLE INTO THE WALL MATERIAL.

NOTE




WHEN MOUNTING THE RF BRIDGE TO CONCRETE OR BRICK, IT IS ADVISED TO FIRST USE THE RF BRIDGE TO MARK THE MOUNTING HOLE POSITION AND REMOVE THE RF BRIDGE BEFORE DRILLING THE PILOT HOLE.


RF BRIDGE INSTALLATION

4 CONNECTING RF BRIDGE


- 1:** REMOVE THE COVER AND INSERT THE RJ12 CABLE INTO THE RF BRIDGE.

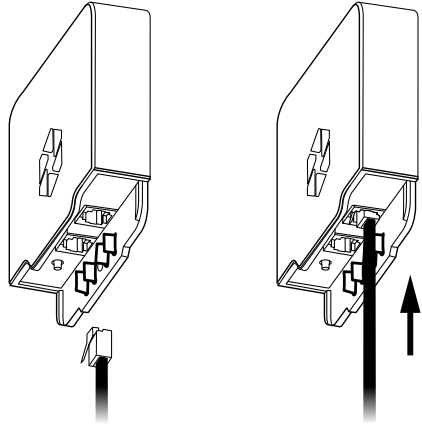

- 2:** INSERT THE RJ12 CABLE INTO THE CABLE GUIDE SLOT ON THE LOWER COVER OF THE RF BRIDGE.

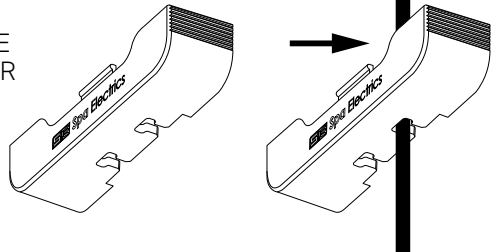


- 3:** RE-INSTALL THE LOWER COVER ON TO THE RF BRIDGE.

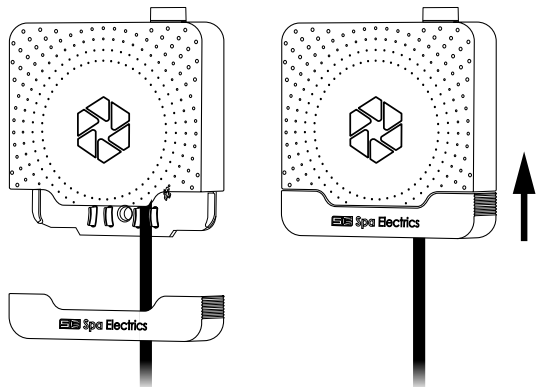

WIRING - EXAMPLE 1

INDEPENDENT WIRING

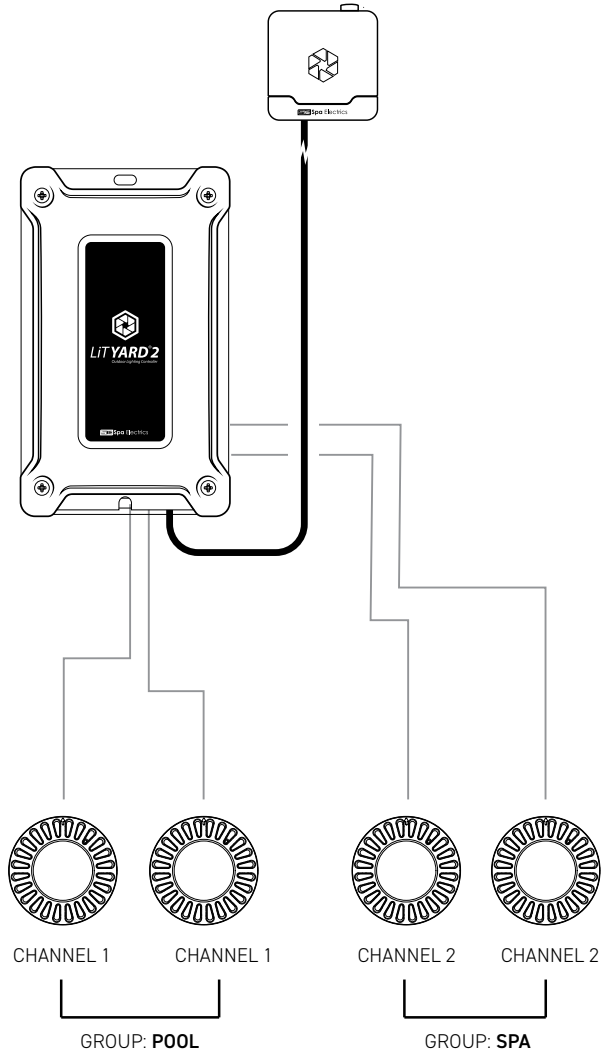


NOTE



POOL & SPA CHANNELS CAN BE CONTROLLED INDEPENDENTLY OR AS A GROUP VIA THE REMOTE.

WIRING - EXAMPLE 2

BRANCH WIRING

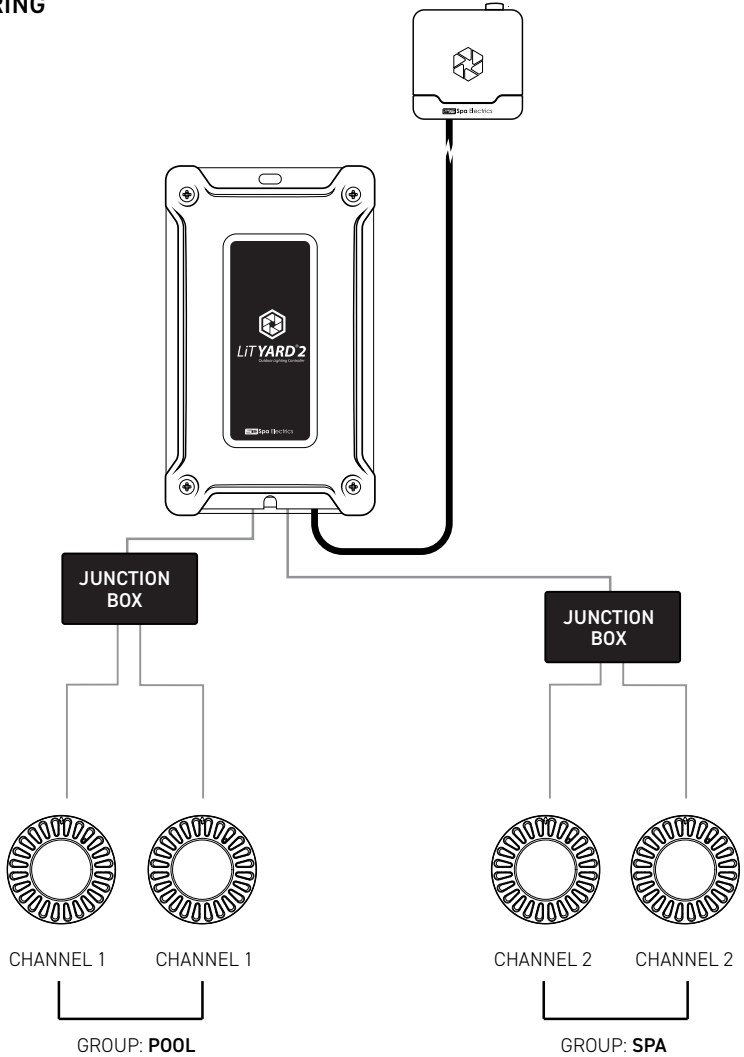


NOTE



POOL & SPA CHANNELS CAN BE CONTROLLED INDEPENDENTLY OR AS A GROUP VIA THE REMOTE.

WIRING - EXAMPLE 3

MULTIPLE LIT YARD CONTROLLERS

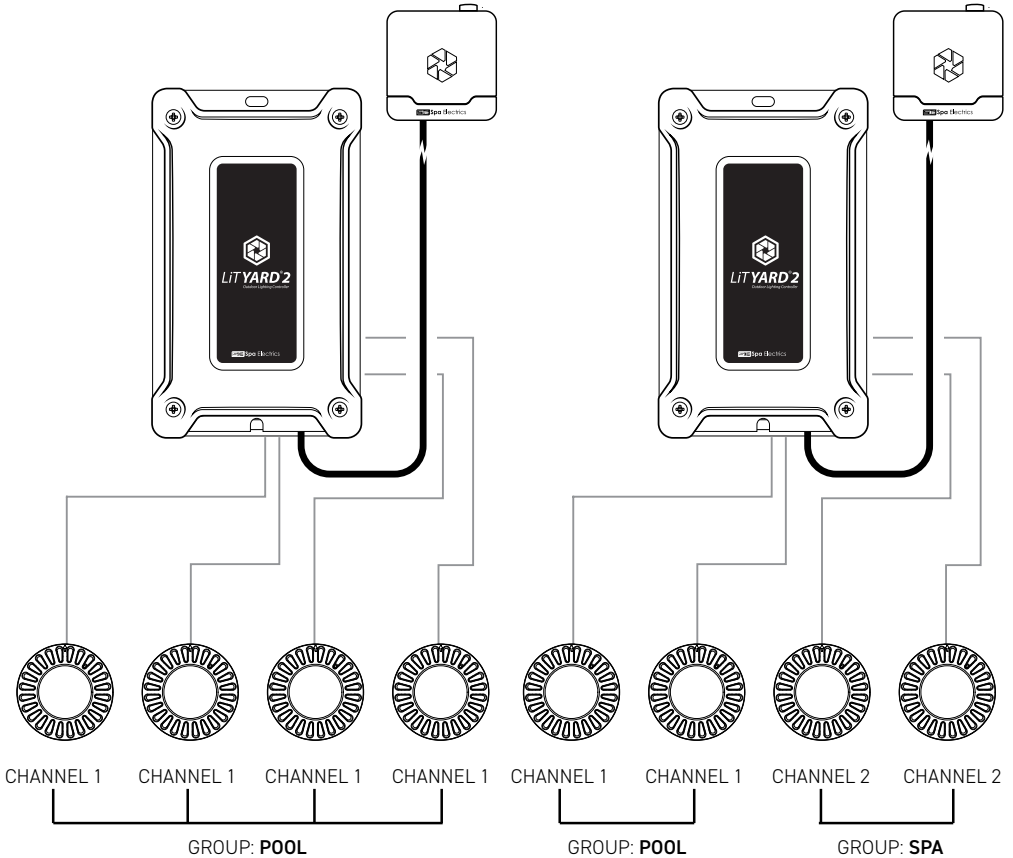

LARGER INSTALLATION?



THE LIT YARD SYSTEM CAN SUPPORT A MAXIMUM OF 10 CONTROLLERS. EACH LIT YARD 2 CONTROLLER REQUIRES ITS OWN RF BRIDGE.

QUICK SETUP PROCESS

BEFORE YOU START

- The Remote Handset is designed to be used with the Spa Electrics LiT YARD 2 Controller. (Please check product labeling to ensure it is suitable)
- For Retro-fit installations, where existing transformers have been hardwired; a suitably qualified electrician must disconnect the transformers and terminate with a plug top connection in accordance with NEC and State Electrical Codes for hardwired installations.

LiT YARD 2 QUICK SETUP

The Remote Handset has a QUICK SETUP feature to program LiT YARD 2 for operation.

STEP 1

Ensure the lights have been OFF for a minimum of 30 seconds, then turn the system ON using the Remote Handset.


STEP 2

Press the following static colors in order with a 1 second pause between each press.

- 2a. WHITE
- 2b. RED
- 2c. GREEN

If performed correctly, the lights will illuminate **GREEN**.

Confirm correct operation by selecting a different color using the Remote Handset.

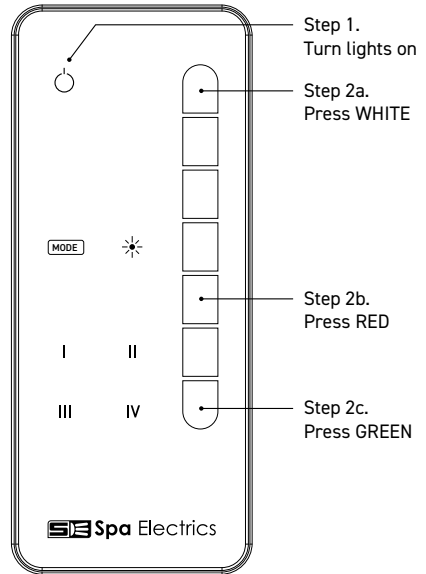


LiT YARD 2 QUICK SETUP

Manual LiTYARD 2 Set Up is for installations where the use of the quick set up is not possible.



LIT YARD RF BRIDGE LED STATUS

THE FRONT OF THE LIT YARD RF BRIDGE HAS AN LED INDICATOR. PLEASE SEE BELOW FOR THE STATUS OF DIFFERENT COLORS INDICATED.

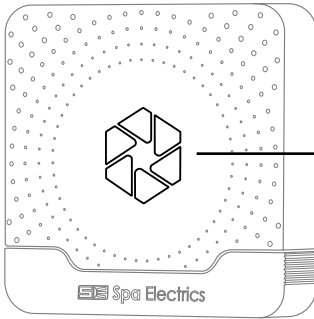

SOLID GREEN —————	INDICATES THE LITYARD RF UNIT IS POWERED UP
SOLID RED —————	INDICATES THE LITYARD RF BRIDGE IS READY FOR PAIRING TO A REMOTE HANDSET
FLASHING RED - - - - -	INDICATES THE LITYARD RF BRIDGE IS PAIRED TO A REMOTE HANDSET. FOLLOW "HANDSET PAIRING – MEMORY RESET" TO CONNECT A NEW HANDSET.

HANDSET PAIRING

Your Remote Handset should come pre-assigned to the LiT YARD RF Bridge. However if it is not paired, please follow the below instructions:

STEP 1: Press the pairing button on the base of the LiT YARD RF Bridge.

The LiT YARD RF Bridge will now switch to learning mode, indicated by the solid red LED.


STEP 2: Within 7 second, press any of the buttons on the Remote Handset.

The Remote Handset is now assigned to the LiT YARD RF Bridge


MEMORY RESET: To reset the receiver memory, press and hold the button on the bottom of the LiT YARD RF Bridge for 10 seconds. The LED indicator will flash fast initially, then flash slow indicating the memory has been erased. Once erased, release the Button and complete steps 1 & 2 to program the Remote Handset.

TO ACCESS THE PAIRING BUTTON ON THE LiT YARD RF BRIDGE


1: Slide down the Bottom cover of the LiT YARD RF Bridge.

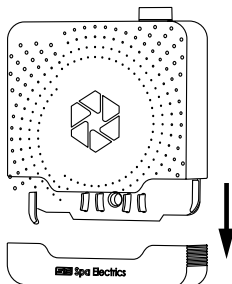

2: The button is located to the left of the cable inputs.

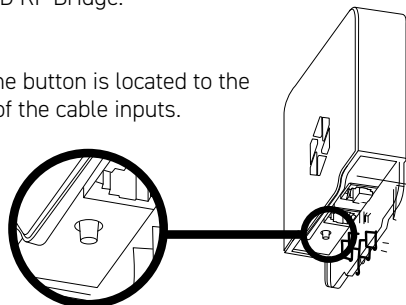

REMOTE HANDSET OPERATION

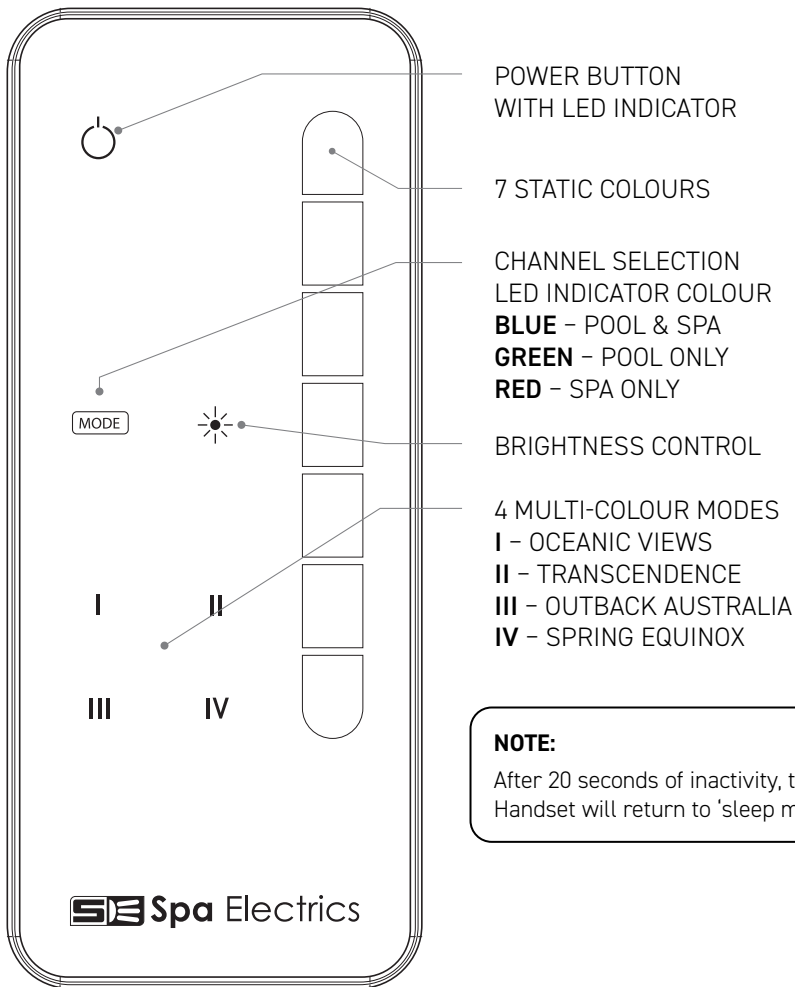

NOTE:

After 20 seconds of inactivity, the Remote Handset will return to 'sleep mode'.

TROUBLE SHOOTING – REMOTE HANDSET

CONDITION	CORRECTIVE ACTION
Flashing power indicator on Remote Handset	Low Battery – Replace 2 x AAA Batteries in Remote Handset
Intermittent communication between Remote Handset and the RF Bridge	<ul style="list-style-type: none"> – Reset RF Bridge memory (see 'Handset Pairing') – Pair Remote Handset to RF Bridge (see 'Handset Pairing')

FCC COMPLIANCE STATEMENT

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC rules. Operation is subject to the following two (2) conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different to that to which the receiver is connected.**
- **Consult the dealer or an experienced radio / TV technician for help.**

The device radiates radio frequency energy at a level below the United States FCC radio frequency exposure limits. Nevertheless, this device should be used in such a manner that the potential for human contact during normal operation is minimized. For body worn operation, this device has been tested and meets FCC RF exposure guidelines when used with accessory that contains no metal. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

ISED COMPLIANCE STATEMENT

This device complies with ISED Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISDE Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

SPECIFICATIONS

Enclosure Size: H27cm x W15cm x D10cm

Enclosure Type: UL Listed Polycarbonate (black)

Primary Conduit Entry: (2) ½"-¾" ports, (2) ¾" ports

Second Conduit Entry: (2) ½"-¾" ports, (2) ¾" ports

Overload Protection: Replaceable 10A blade fuse.

Model	Input 60 Hz.	Secondary Output	
		Lamp Watts (W)*	Voltage (VAC)
LiT YARD 4X	110 VAC	100 Max.	12 / 13.5
LiT YARD 4XP	110 VAC	100 Max.	12 / 13.5

* Any combination of bulbs, any output.

TECHNICAL SPECIFICATION

RECEIVER RATING

Input: 110VAC ~ 60Hz

Output: 110VAC ~ 60Hz switched

Max. Load: 100W MAX. TOTAL

REMOTE

Battery: 2 x 'AAA'

Range: Up to 54yd (50m) – line of sight

Freq: 916MHz ISM Band

NOTE



PLEASE STORE THIS MANUAL IN A SAFE PLACE FOR FURTHER REFERENCE

 **Spa Electrics®**

spaelectrics.com

© COPYRIGHT 2026 SPA ELECTRICS INC.
ALL RIGHTS RESERVED

2026 05 07